




LIGHT & SOUND PHONICS



INSTALLING THE BATTERIES

This product requires 3 x 'AA' (LR6) 1.5V batteries

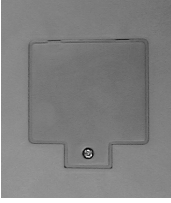

Using a suitable screwdriver, undo and remove the battery cover located under the unit.

Insert 3 x AA batteries into the compartment ensuring they are installed the correct way around. The polarities are marked inside the battery compartment. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring. Reassemble the battery cover and tighten the screen to secure. Do not over tighten.



Please note the important points below:


- Installation of the batteries must be done by an adult.
- Batteries included are for in-store demonstration purposes only. Replace with new batteries before playing.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries. An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to load uncharged batteries, as they may leak or explode.
- Replace all batteries at the same time. Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.

- Do not short-circuit the supply terminals.
- Exhausted batteries must be removed from the product and disposed of properly (do not burn or puncture used batteries).
- We do not recommend using rechargeable batteries.
- When rechargeable batteries are used anyway, make sure that they are charged only under the supervision of an adult and are removed from the toy before being charged.
- If a battery is swallowed, consult a Doctor or Medical Facility, don't forget to take the Light and Sound phonics with you.

AUTOMATIC SHUT OFF

In order to save the battery life, the unit switches off if left idle for two minutes. To re-activate the unit, just press any key.

THE UNIT

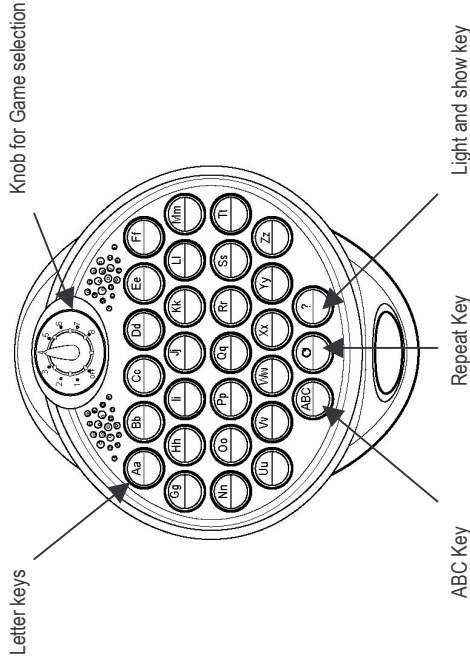

THE KEYS

Letter keys : Use those keys to play or answer the questions about letters, numbers, colours and spelling.



Repeat key : By pressing this key, unit will repeat the instruction.



ABC key : By pressing this key at any time, in any game, unit will interrupt the game and say the ABC's and light the keys.



Light and show key : This is a Magic key, by pressing it at any time, in any game, unit will interrupt the game, play music and flash all the keys in rhythm with the music.



HOW TO PLAY

- Once the batteries have been inserted, move the Knob to one of the 8 games,
- Unit automatically enter in game selected. You can start playing

DETAILED GAME RULES

Game 1 : Letter names and sounds

Press a letter key to hear its name and sound (phonics)

Game 2 : Find the letter

The unit will ask you to find a spoken letter. The illustrations on the keys will assist you. You have three attempts.

If you make a mistake the unit gives you a hint, by lighting some letters, the right answer can be found within these letters. If after three attempts you have not found the correct letter the unit will tell and light the correct answer and say: "here it is".

TROUBLE SHOOTING

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys becomes dim	Install new batteries.
If the unit malfunctions...	Install new batteries

IMPORTANT INFORMATION

- This product is suitable for kids aged 3 and over
- **WARNING** : all packaging material such as plastic collars and blister are not part of this product and should be discarded for your child's safety.
- Do not use chemical solvent to clean the product. Do not pour water on the product. In case of contact with water, remove immediately the batteries and dry it carefully before use it.
- To clean the product, wipe it with a slightly damp cloth or a soft dry cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not being used for an extended period of time.
- Do not expose the unit to moisture or water.

Game 3 : The mystery letter

You have to find the mystery letter within five tries.
All the letters are lit, and the unit will ask you to find the mystery letter.
Press on one of the letters, and unit tell you if it is the right answer or not. If it is not the right answer, the unit will help you by telling you if the mystery letter is before or after the letter you pressed, (letters that can not be mystery letter are then switched off and become inactive.)

Game 4 : The first letter

The unit will ask you to find the first letter of a spoken word ("can you find the first letter of the word Dog").
If you make a mistake, the unit gives you a hint by lighting some letters, the right answer can be found within these letters. You have three attempts. If after three attempts you have not found the correct letter the unit will light the correct answer and say: "here it is".

Game 5 : Word spelling

The unit will invite you to spell words.
The illustrations on the keys will assist you. If you make a mistake, the unit will help you. After a word is spelled correctly, the unit will then spell the word again lighting up each letter in order.

Game 6 : Numbers

The unit will ask you to press on a certain numbers of keys.
Take care, you have only 5 seconds to complete this task.

Game 7 : Colors

The unit will ask you to press on one key in a specific color
You have three attempts.

Game 8 : Music time

Press a key and hear a tune.
The keys will flash while the music is being played. Important information about the product

This product conforms to the safety requirements of ASTM F963, the Canadian Hazardous Products (toys) regulations and European Directives 88/378.

We back our products:

We maintain the highest quality standards. We back our products with a 90-day warranty and our Toll free Customer Service Number. You can be assured you are purchasing quality with Kidz Delight.

Kidz Delight, Ltd.
9999 W. Roosevelt Road
Westchester, IL 60154
USA

Customer service: (800) 777-8670
©Kidz Delight, Ltd.



www.kidzdelight.com

Printed in China
All right reserved.